



One Education Infinity:One Back Case Prerequisite

This guide will show you how to remove the back cover of the One Education Infinity:One laptop.

Written By: Taylor Bratsch



INTRODUCTION


This guide will show you how to remove the back case of the One Education Infinity:One laptop. This should be used to replace a damaged back cover, or to gain access to internal components for more complex repairs.



TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Jimmy](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Case

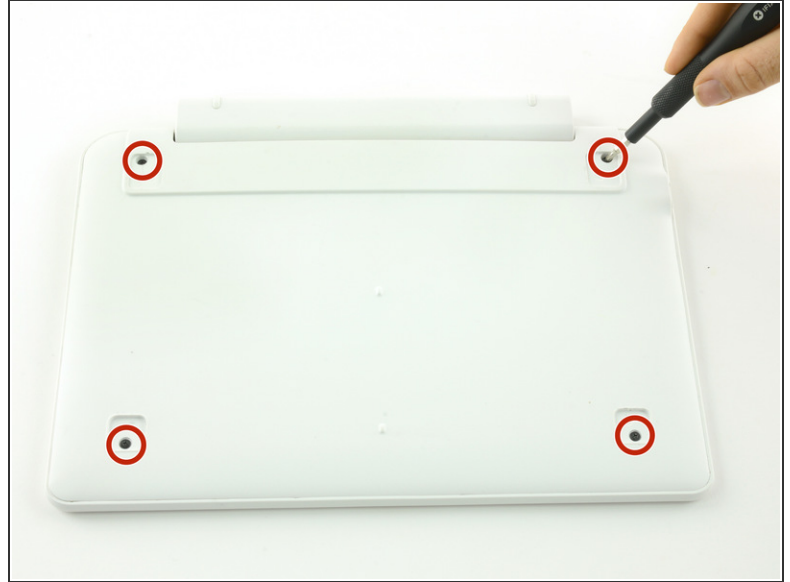


- Use a spudger to pry the four rubber pads away from the bottom of the case.
- Use a Phillips #00 screwdriver to unscrew the four 6.4 mm screws.

Step 2




- Insert a Jimmy or other prying tool into the seam on the edge of the casing.
- Trace along the edges of the device until all clips are released.
- Lift the back case away from the device.

Step 3

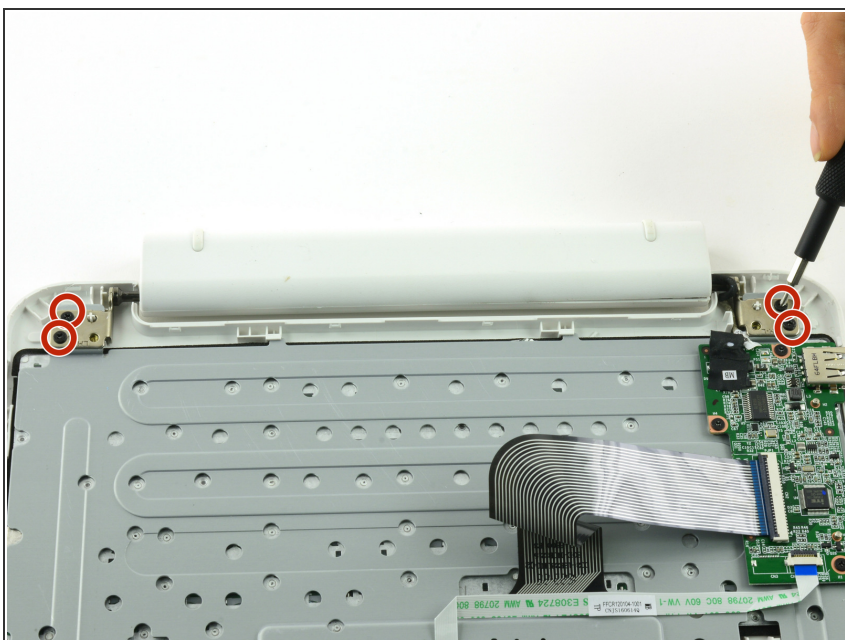

- Use a Phillips #00 screwdriver to unscrew the four 6.4mm screws on the hinge mounts.

Step 4

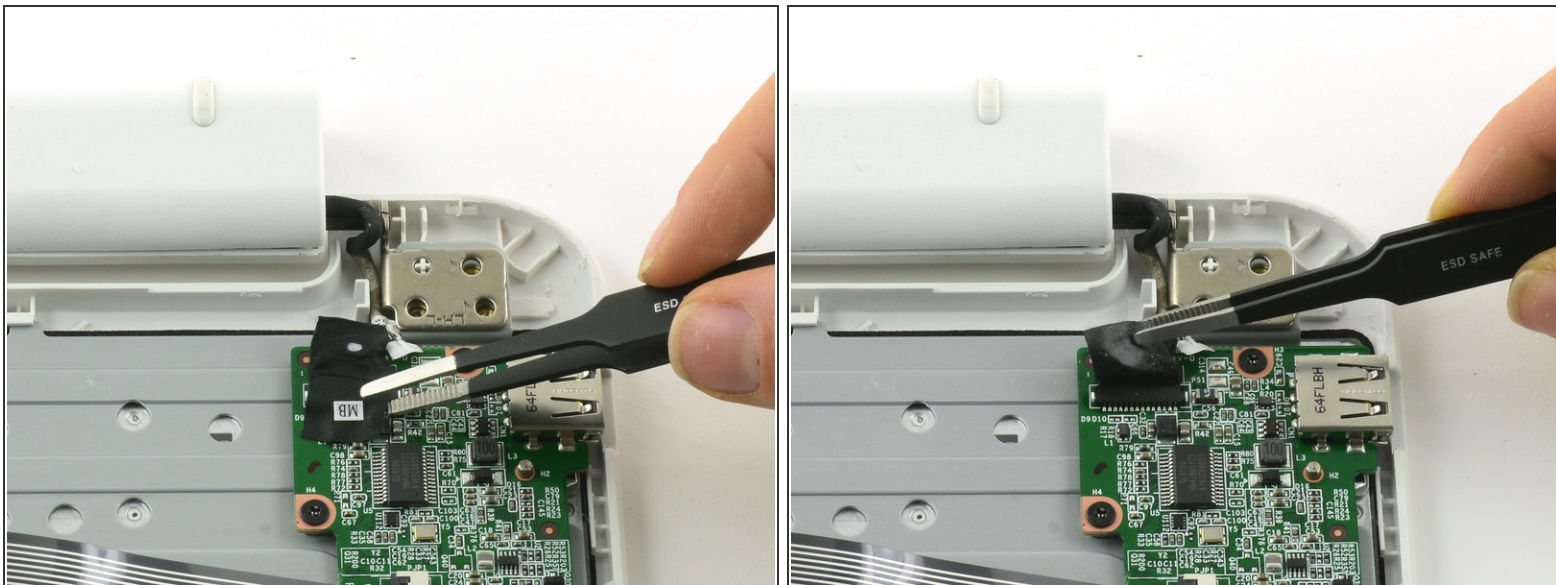

- Use tweezers to lift the fabric cover and hinge connector away from the daughterboard.

⚠ Always use ESD safe tools when working with delicate electrical components.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 05:01:51 PM.